 


Installation manual for heaters

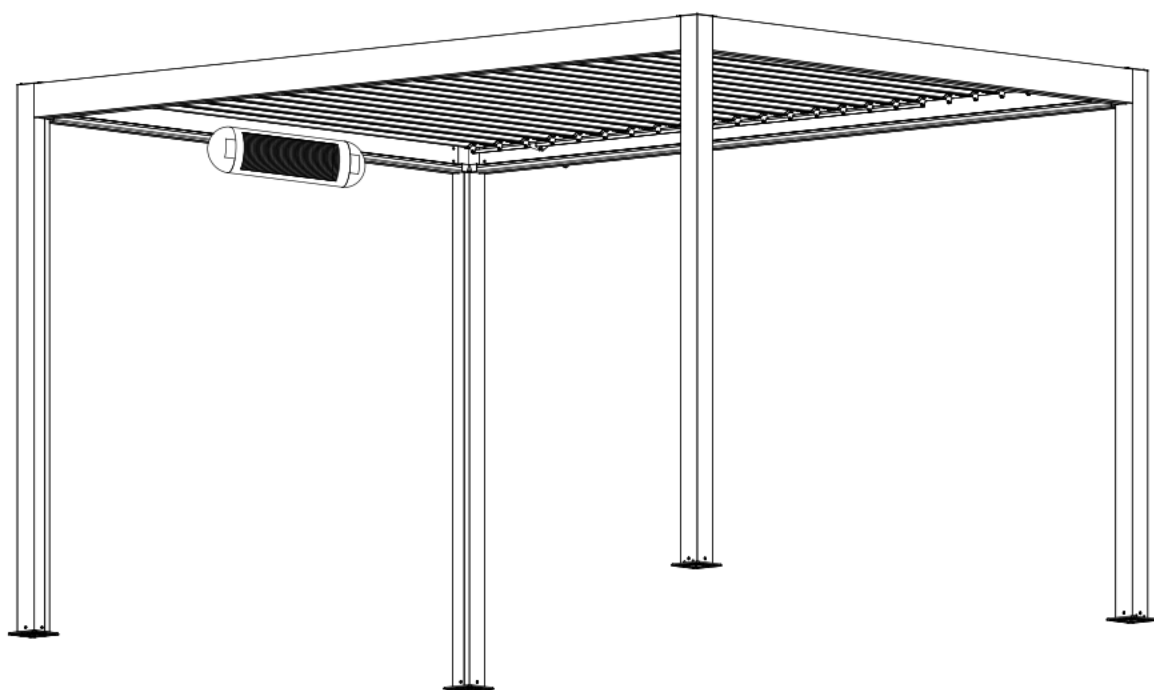

Please keep this instruction for future reference.

This manual contains important safety information concerning the maintenance, use and operation of this product. Failure to follow the instructions contained in this manual may result in serious injury. If you are unable to read the contents of this manual, please bring it to the attention of your supervisor. Do not operate this product unless you have read and understand the contents of this manual.

IMPORTANT SAFETY MEASURES

When using any kind of electrical appliance, some basic safety precautions must always be followed, including the following:

- 1) To avoid possible electric shocks, do not place the cable, plug or appliance in water or in any other liquid. Do not insert screwdrivers or metallic items inside the appliance.
- 2) If the power cable is damaged, it must be replaced by the manufacturer, its service technician or by someone else authorized by the manufacturer. In the event of handing of appliances by non-authorized people, the guarantee will immediately cease to be valid.
- 3) Do not use appliances if they are damaged.
- 4) To disconnect electrical appliances, wait until the heater stops and then unplug the cable from the electric socket.
- 5) Do not leave appliances working unattended. Ensure that the heater has come to a complete stop before dismantling appliances. Unplug appliance after each use.
- 6) Do not allow children to use electrical appliance. Do not leave appliance unattended when in use close to children.
- 7) Children of less than 3 years should be kept away unless continuously supervised.
- 8) Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- 9) Do not dispose of this product as unclassified municipal rubbish. Due to the use of electrical and electric parts, this product must be collected separately.
- 10) **CAUTION** — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- 11) **WARNING:** The appliance shall, under no circumstances, be covered with insulating material or similar material.
- 12) The heater must not be located immediately below a socket-outlet.

NOTICE

- 1) The power supplied to this unit must comply with electrical requirement on its label. Damage or fire may result if the incorrect power used.
- 2) Do not use the heater in somewhere with flammable objects, gas, dust.
- 3) In order to avoid scalding, forbid to touch the heater when it works.
- 4) Forbid to put anything on product surface when it is working.
- 5) To avoid possible electric shocks, do not place the heater in bathrooms or similar indoor location.
- 6) In order to avoid fire, do not use the heater with automatic electrified sequencer, timer and other devices.
- 7) Children of less than 3 years should be kept away unless continuously supervised. Children shall not play with the appliance.
- 8) Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards

involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.


- 9) Turn off all switches and unplug the heater if an emergency situation occurs.
- 10) Please contact with seller if it does not work properly. Do not try to repair the heater by yourself.
- 11) Please contact the seller if you find other problems not covered in this operation manual.
- 12) Cleaning and user maintenance shall not be made by children with supervision.

SPECIFICATION

Model:	THL011
Feature:	Rocker Switch
Remote:	Yes
Voltage:	220-240V~50-60Hz
Power:	2500W
Weight:	3.5kg
Size:	100*20*13cm

OPERATION

 Turn on the switch where on the heater back. Then use remote to control.

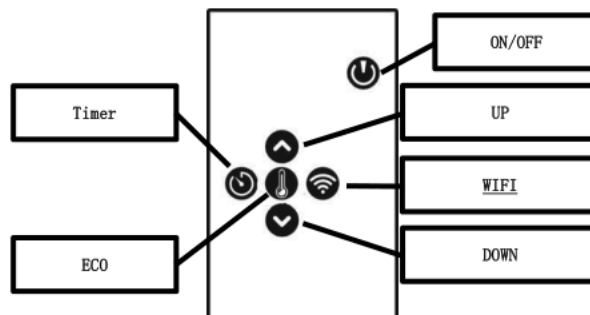

ON/OFF	Press the button to ON/OFF the heater
UP/DOWN	Increase/decrease the heater power/time setting/temperature
WIFI	Press five time to matching mode and the wifi light on the screen will flash. Open the TUYA app and follow the instruction of the app to connect the heater with app.
ECO	Press once to ECO mode. Again to quit the mode. Press the UP/Down button to increase/decrease the temperature. 15 °MIN, 45 °MAX. The heater will stop if the surrounding temperature reach the setting. The heater will back to work if the surrounding temperature lower than setting.
Timer	Press once to Timer setting. Press the UP/Down button to increase/decrease the time. 0.5hs MIN and 8hs MAX.

CLEANING AND MAINTENANCE

- 1) Always turn off and unplug the heater before cleaning.
- 2) To clean the heater, use a damp cloth and make sure to dry excess water once cleaned.
- 3) Only after turn off the heater, can move the heater with the leaning 45° .

 
 
 
 
 
 
***ATTENTION** Do not put the heater directly into any container with water in it.





To comply with European Directive 2002/96/EC concerning old electric and electronic equipment and its implementation in national laws, old electric tools have to be separated from other waste and disposed of in an environment-friendly fashion, e.g. by taking to a recycling depot.

TROUBLE SHOOTING

- 1) If the heater does not emit heat after turning on, please check the power cord whether plugged into electric socket properly.
- 2) In first use, it is normal if the heater appears small amount of smoke and some smell because of protective-oil evaporation.

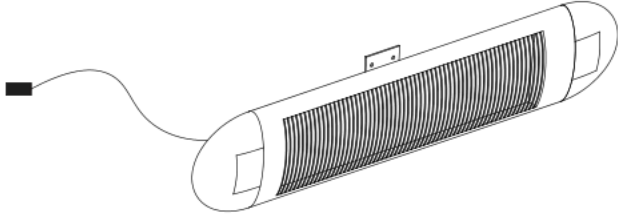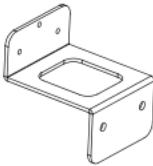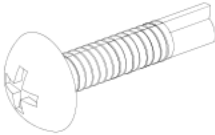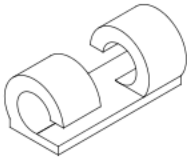No.	Pic.	Qty.	Parts
A		1	Heater
B		1	Heater installation bracket
C		1	Power card
AA		2	M6*8
BB		5	ST3.9*25
CC		3	Wire clamp
DD		1	4mm
		1	Remote

 
 
1

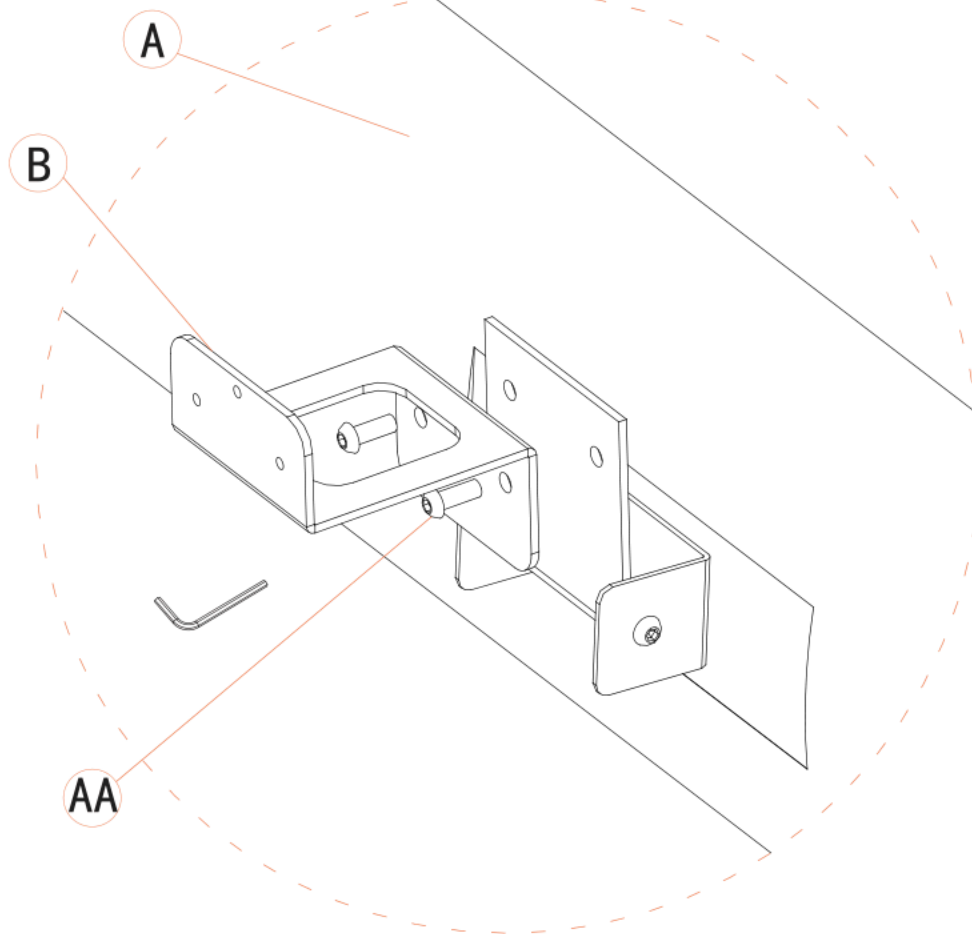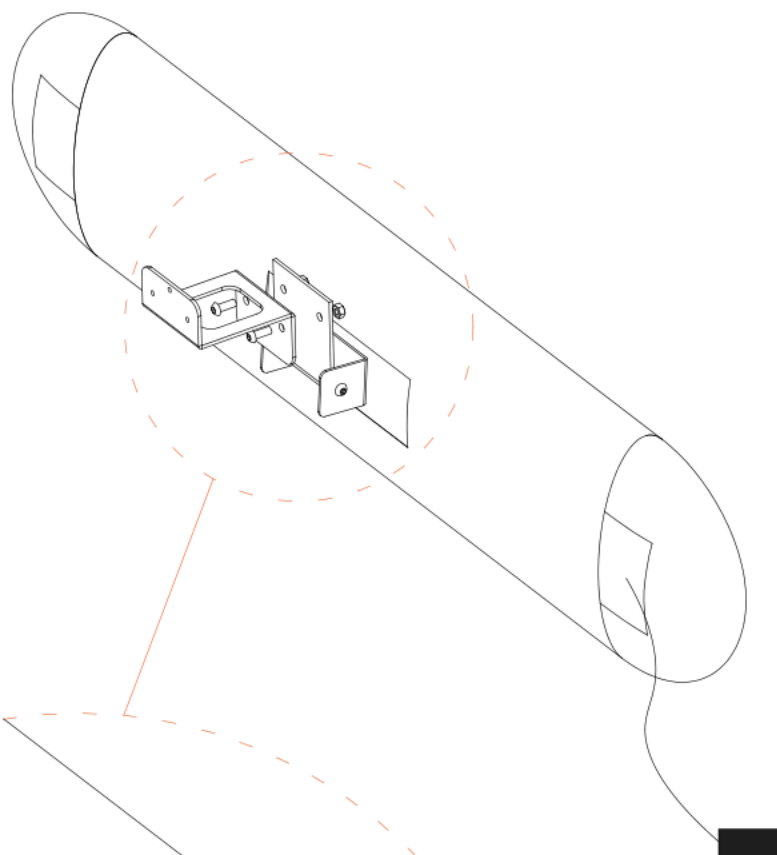


AA

AA		M6*8	2
DD		4mm	1

  
2

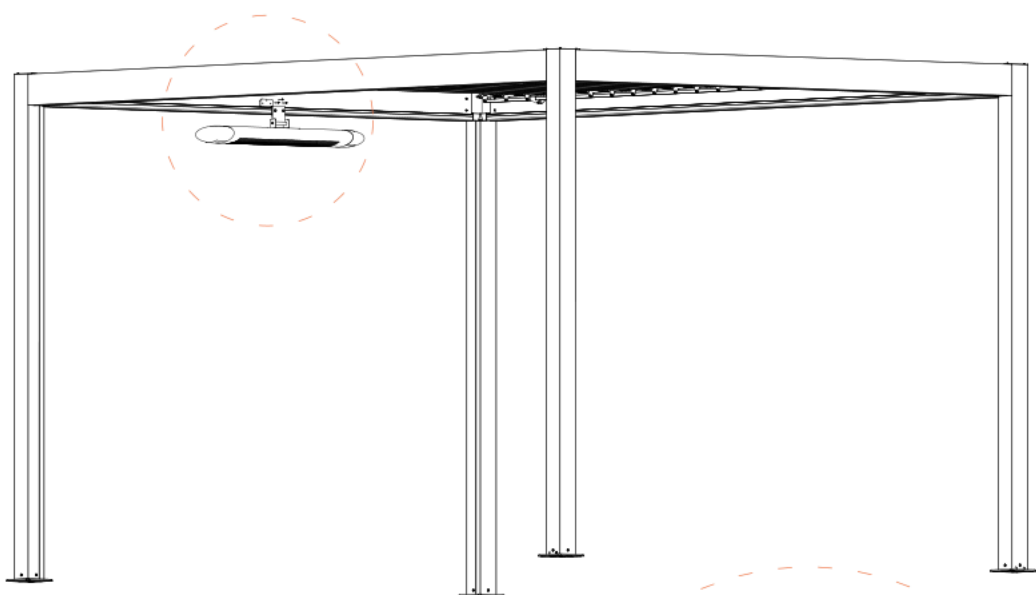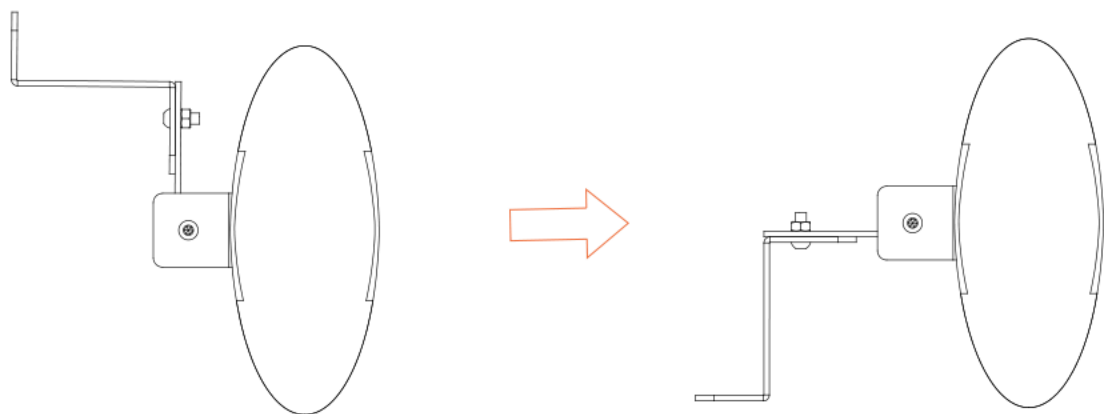

 When installing the bracket, make sure it is level with the sink

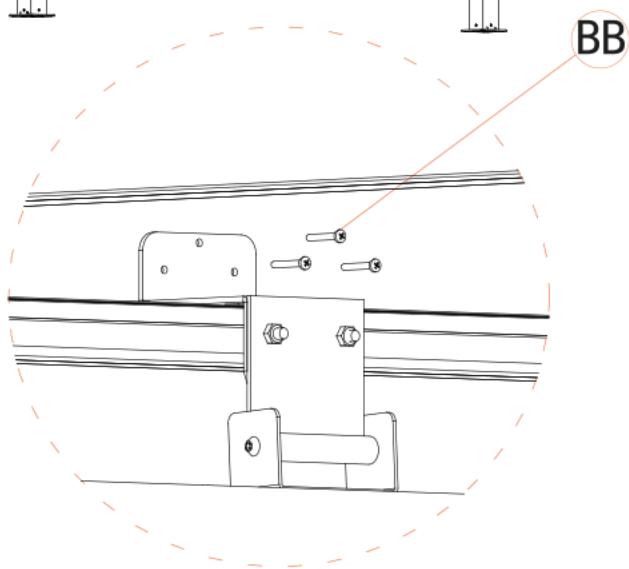


BB

 

ST3. 9*25


3

 3

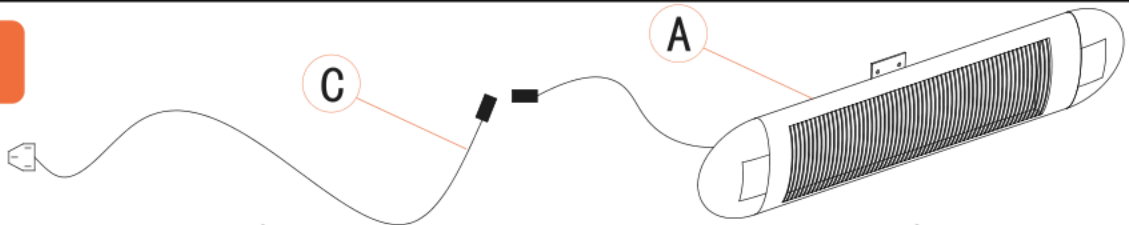


Connect the female plug to the plug connector of the heater.

 Fixed the power cord to the side beams with wire clamps

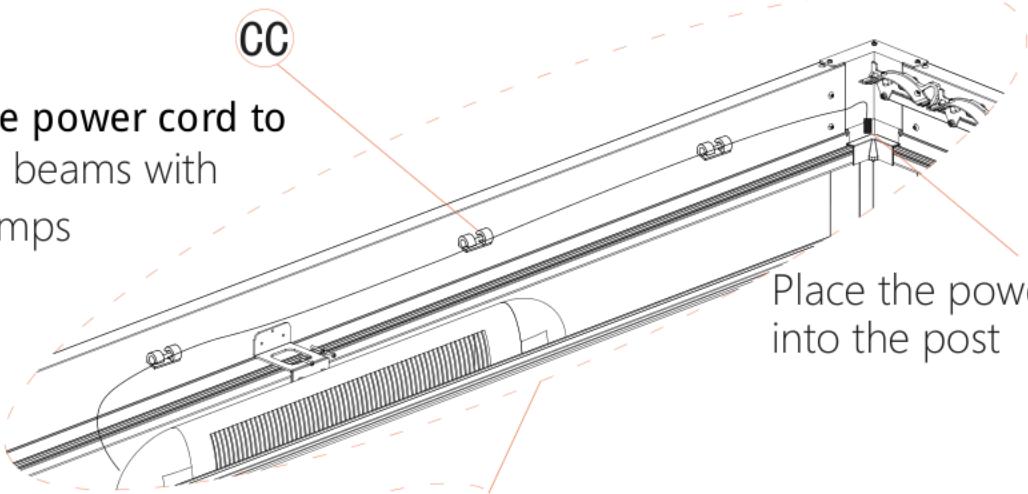

Place the power cord into the post

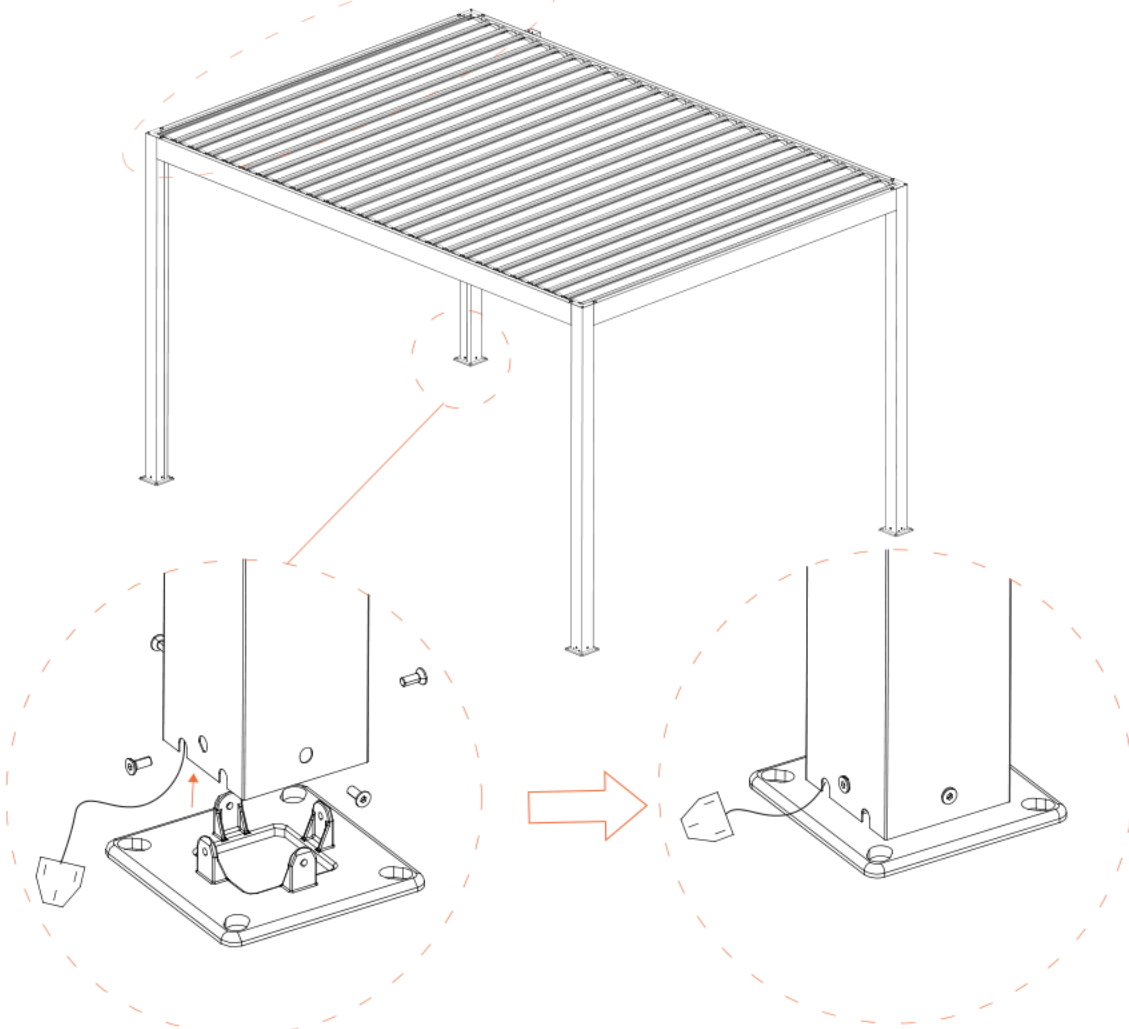 

Loosen the screws of the post, lift it up and pull out the power plug